
FINIXA paint processing products	chargir	rpods will automatic 1g case. The left and 0 turn on the "TWS J	right Earpo	ds will conne		2 The case display screen will light up, turn on Bluetooth of your phone as shown in the figure below.
To connect a mobile phone running the latest version of IOS and Android, please follow steps 1-3. (charging	our phone g case while ur phone.	and open the holding it	2	Image: State of the state
FINIXA EARPODS MANUAL	Component Lea Name Case O Circuit board X Battery X This form is prepared O: It means that the c component is with X: It means that the c	Mercury Cadmium O O O O O O O O O O O O O O O O O O O	HTHE F	res Polybrominated Biphenyls 0 0 0 0 geneous material	Polybrominated Dipheny Ether 0 0 0 s of the	 FAQ 9: There is no response when I put the charging case on the wireless charger? A: Before using the wireless charger, please make sure that the wireless charger being used has a qualified Qi certification. Please note that this product Is not compatible with all wireless chargers in the market. 9: The automatic connection of the Earpods with the phone is not working after opening the charging case? A: If the Earpods cannot be connected automatically, please connect them manually according to the connection steps in Figure 1 on page 4 of the manual. 9: Possible disconnection during normal use? A: Take the Earpods off, adjust the angle and put them on again. This problem occurs because the 'in-ear-detection' is not in place. Every person's ear size is different so the detection can be misjudged.
$\int \mathcal{O} \left[\int \mathcal{O} \left[\mathcal{O} \right] \mathcal{O} \right] $					15	14

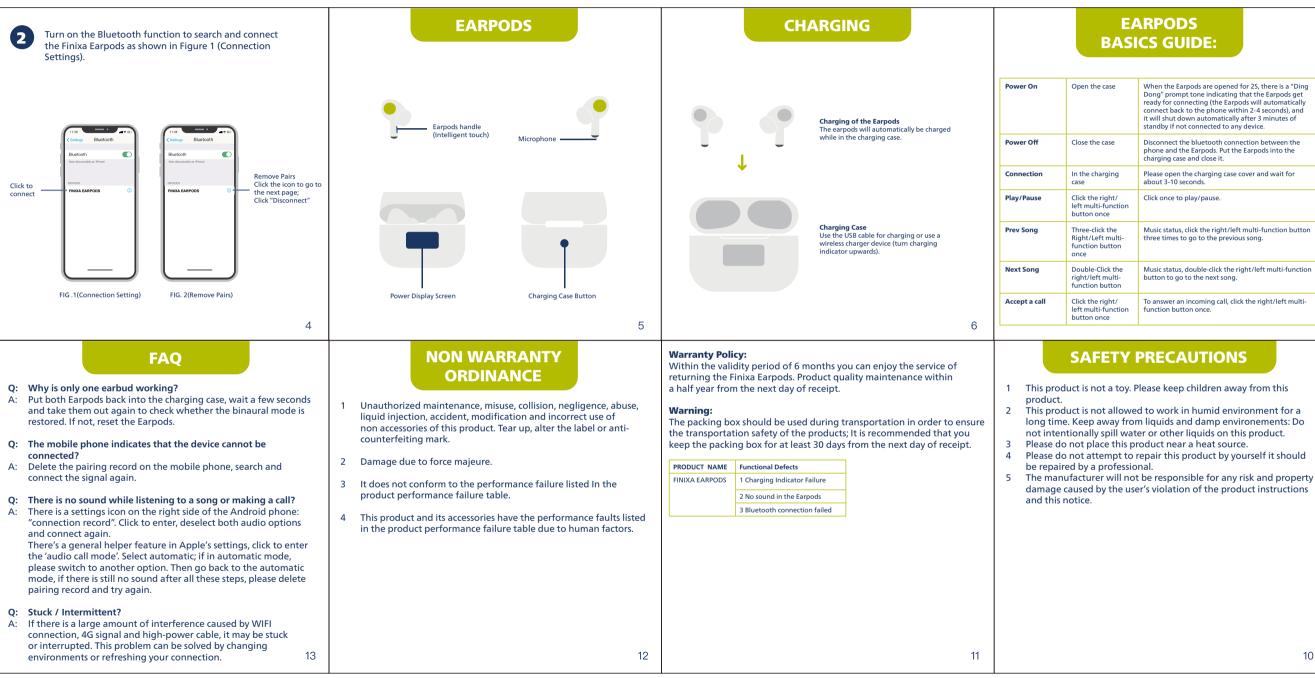

5	
D	Е:

Dong⁺ prompt tone indicating that the Earpods get ready for connecting (the Earpods will automatically connect back to the phone within 2-4 seconds), and it will shut down automatically after 3 minutes of standby if not connected to any device. Disconnect the bluetooth connection between the phone and the Earpods. Put the Earpods into the charging case and close it.

Please open the charging case cover and wait for

Music status, click the right/left multi-function button hree times to go to the previous song.

EARPODS **BASICS GUIDE:**

End a call	Click the right/ left multi-function button once	Call status, click the right/left multi-function button once.
Decline a call	Double-click the right/left multi- function button	To decline an incoming call, double click the right/left multi-function button.
Low power shutdown		Low power reminder: the Earpods send out "beep beep" tone: 10 minutes left between the low power and turning off the power and it will alarm three times, once every three minutes.
Remove connection (reset)	FINIXA EARPODS	FINIXA EARPODS reset: do as shown in Figure 2 on Page 4.

visit our website

WWW.FINIXA.COM

or contact us

INFO@FINIXA.COM